
# Wireless Digital Security Camera Handheld AV Receiver

2.4GHz GFSK Hopping

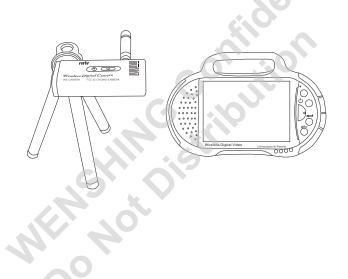

Model: WS-CAMERA

Model:WS-Handheld AV Receiver

Vision History

Version	Date	Changes
V1.0	Feb.21,2012	1 <sup>st</sup> Edition

ING Contidential

# Content

Important Event				
Declaration				
Warranty	· 1			
Definition of				
2.4G Wireless Digital Security Camera · · · · · · · · · · · · · · · · · · ·	2			
Handheld AV Receiver	2			
Specification				
Wireless Digital Security Camera	. 3			
Handheld AV Receiver	. 3			
RF Specification · · · · · · · · · · · · · · · · · · ·	. 3			
Operating Environment	. 3			
Operating Instructions				
Wireless Digital Security Camera				
Turn On				
Pair ·····				
Illuminate	_			
Recharge	- 5			
Handheld AV Receiver				
Turn On				
System Menu				
Auto Mute Setting				
Setup Record				
Pairing				
Settings				
Set up Date & Time				
Set up Format				
Set up Default				
Set up Camera Volume				
Recording (Only when Mini micro-SD was inserted in the device)	14			
Low power indication and plug in the USB recharger				
Standby Mode				
FCC Consiste nt Declaration(U.S.A. Only)	16			
Administrative Regulations on Low Power Radio Waves Radiated Devices				
Article 12	16			
Article 14	16			

## **Important Event**

\_

- This product is in general use for the equipment on the premise of the development, design, manufacture. Do not use that require high security purposes, such as machinery or medical, aviation equipment, machinery and transport-related deaths are directly or indirectly related to the system
- 2. This product should be in this brochure by the instructions of the types and rated voltage power under the current proper use. If violation of this statement by the safety records of the supply operation, I am afraid our company cannot afford any of the responsibility.
- 3. Do not self-decomposition, alteration, repair of the products also will cause fire, electric shock, fault, and dangerous. In addition, their decomposition, alteration, repair the product, failure is not within the scope of warranty.
- 4. The products are not waterproof, so please do not use and touch water. Take off and on also please note. Rain, spray, drinks, steam, sweat may be a failure.
- 5. Use of this product, please be sure to use according to the statement recorded by the use of methods to operate. Please do not violate particular attention to the matter reminded to use.
- 6. Please respect this statement recorded by the note. When consumers in contravention of this statement recorded note of the operation, I am afraid our company could not shoulder any responsibility.
- 7. Products are defective, the Company will be responsible for free to amend the flaws, or to the same flawless product or its equivalent products in exchange. However, the Company does not assume based on the requirements of the flaw and loss responsibility.
- 8. The Company reserves the right to relain without notice to users of the cases, the product of hardware / software (version upgrade) is with the right to edit.

Declaration

This product provides different frequency for user selection to meet different telecommunication regulation and FCC/NCC on different countries.


Warranty

The warranty time is within one year from purchased date. The warranty scope are used in normal situation and none vandalism. (Some function harmful out of warranty scope and Vandalism are Un-warranty).


## **Un-warranty Scope Description**

- 1. Because the natural disaster, accident or human factor to cause the bad damage.
- Violate the product instruction manual to cause the damage of the products.
- 3. The improper assemble causes damage.
- 4. The products used the unsanctioned accessory to cause damaged.
- 5. Overstep the allowed used environment to cause the products damaged.

# Wireless Digital Security Camera

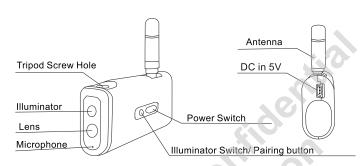

# Handheld AV Receiver

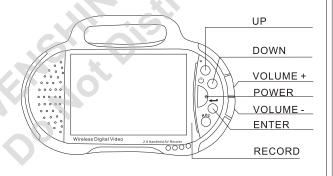

# Wireless Digital Security Camera

Size: 68.6mm (Long) \*34mm (Wide) \*16.9mm (High)

Weight: 37.8g (include the battery and antenna)

Lens: 1/4"CMOS sensor(640x480) Omni directional Microphone

Battery: Built in 450mA Li-ion battery

Operation period: 1 hour Illumination: White LED

Power supply: B Type Mini USB DV 5V/1A

#### Handheld AV Receiver

Size: 117mm (Long) \*79mm (Wide) \*9.6mm (High)

Weight: 62g (include the battery)

LCD: 10~16 frames at 320x240(QVGA) \cdot 262K \cdot 0.153 dot pitch

Battery: Built in 600mA Li-ion battery

Operation period: 1 hour

Power supply: B Type Mini USB DV 5V/1A

Mini micro-SD: Support 8G

#### RF Specification

Frequency: ISM 2400~2483MHz hopping Transmission Power: 100mW (20dBm)

Modulation Mode: GFSK

# Operating Environment


Operating Temperature: 0°C ~+50°C Memorizing Temperature:  $-10^{\circ}\text{C} \sim +60^{\circ}\text{C}$ 

#### **Operating Instructions**

P 4

After successfully connected the Camera with the Recorder, then turn into blue.



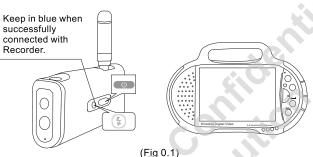

# Wireless Digital Security Camera

#### Turn On

Press on to turn on the power, glows a steady blue if the device is connected to the "Handheld AV Receiver", and blinks blue every 2 seconds if the device is unpaired or out of range.

#### Pair

Will flash in blue continually while you press it for 4 seconds under the turned-on condition. When Handheld AV Receiver is pared successfully, 🚯 will glows a steady blue, and images from that camera will be displayed simultaneously on the Receiver screen. Once Camera is failed to be paired with Recorder, flashes once 2 seconds. User may follow the described steps to make pairs again until success. ( 🚯 is the icon shown in the first picture)

#### Wireless Digital Security Camera

P 5

#### Illuminate

Press 🚱 to turn on the white light illuminator, press again to turn it off.( 👂 Fig 0.1)

#### Recharge

While turns into yellow, it means the Camera is running out of battery. Users may now plug in the USB charger, and will turn into red during recharging. The Camera should be recharged for 3 hours before first-time used, and should be recharged for 1 hour when the battery is low.



#### Handheld AV Receiver

# Turn On

1.1 Press on the button "power" to turn on the "Handheld AV Receiver" and get into the start up screen shown below (fig. 1.1). Press and hold the button "power" for 3 seconds to shut down the





(Fig.1.1)

(Fig.2.1)

#### System Menu

Press "Record" for 3 seconds to enter into System Menu.(fig.2.1)

P.7

#### Auto Mute setting

3.1 Use "Up/Down" to select Auto Mute, and then press "Enter" to enter into setting, use "Up/Down" again to select Yes/No.As below fig (Fig 3.1)





(Fig 3.1)

(Fig 3.2)

- 3.2 Press "Enter", "Set Success" shows up as long as setting has succeeded. As above fig (Fig 3.2)
- 3.3 Press "Record" to back into the System Menu.

### Set up Record

4.1 Use "Up/Down" to select "Record". As below fig (Fig 4.1)





(Fig 4.1)

(Fig 4.2)

#### Handheld AV Receiver

P.6

- 4.2 Press "Enter" to enter into Record function. As above fig (Fig 4.2)
- 4.3 Use "Up/Down" select "Overwrite", and press "Enter" to process setting. As below fig (Fig 4.3)





(Fig 4.3)

(Fig 4.4)

- 4.4 Use "Up/Down" to move Up and Down, choose Yes/No, then press "Enter". "Set Success" shows up as long as setting has succeeded. As above fig (Fig 4.4)
- 4.5 Press "Record" to return to System Menu.

# Pairing

5.1 Use"Up/Down" and select Pairing. As below fig (Fig 5.1)





(Fig 5.1)

(Fig 5.2)

# Handheld AV Receiver

Press "Enter" to enter into Pairing function. As (Fig 5.2)

5.3 As the above picture, select Camera 1, and press "Enter" to enter into paring. Meanwhile, as the Camera is under standby mode, push (a) and last for four seconds, (b) will then continuously flash in blue. After Camera was successfully paired with Recorder, (b) steadily keeps in blue, and images from that camera will be displayed simultaneously on the Recorder screen. Once Camera is failed to be paired with Recorder, (b) flashes once 2 seconds. User may follow the described steps to make pairs again until success.







(Fig 5.3)


(Fig 5.4)

- To pair with more than one camera, press the button "Up/Down" to select camera 2/camera 3/camera 4. Go through the procedure 5.1 to pair with camera 2/camera 3/camera 4 as shown above (fig. 5.4).
- 5.5 Users will see the follow image as camera has been searched, which means pairing is processing. About 1 minute later, image disappears. As below fig (Fig 5.5)

# Handheld AV Receiver

P.8

P.9

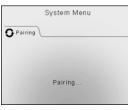




(Fig 5.5)

(Fig 5.6)

- 5.6 When the reminder pop-up (as shown above, fig. 5.5) is gone, the surveillance screen turns up, and the antenna signal strength is displayed on the top left corner.
- 5.7 If the "Handheld AV Receiver" can't be found after search, a "NO SIGNAL" reminder will pop up, as shown in fig. 5.7. Please check if there is LED blinking in camera, and re-do the procedure 5.3.



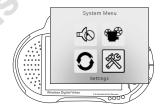

(Fig 5.7)

(Fig 6.1)

# Settings

- 6.1 Use "Up/Down" to select settings. As above fig (Fig 6.1)
- .2 Press "Enter" to enter into Settings. As below fig (Fig 6.2)





(Fig 6.2)

(Fig 7.1)

#### Set up Date & Time

- 7.1 Use "Up/Down" to select Date and Time, then press "A" to enter into the setting mode. As above fig (Fig 7.1)
- 7.2 Use "Volume+/Volume-" to select content that needs to be set, and "Up/Down" to enter right figures. After finished press "Enter", "Set Success!" will show up then. As below fig (Fig 7.2)





(Fig 7.2)

(Fig 7.3)

7.3 Press "Enter" to back to Settings. As above fig (Fig 7.3)

# ●Set up Format

Handheld AV Receiver

9.1 Use "Up/Down" to select Format. As below fig (Fig 9.1)





(Fig 9.1)

(Fig 9.2)

- 9.2 Press "Enter" to enter into Format setting. As (Fig 9.2)
- 9.3 Use "Up/Down" to select No/Yes, then press "Enter", Set success!" will appear on the Recorder screen. As below fig (Fig 9.3)





(Fig 9.3)

(Fig 9.4)

9.4 Press "Enter" to back to Settings. As above fig (Fig 9.4)

# Handheld AV Receiver

P.12

# ●Set up Default

10.1 Use "Up/Down" to select Default. As below fig (Fig 10.1)





(Fig 10.1)

(Fig 10.2)

- 10.2 Press "Enter" to enter into Default setting. As above fig (Fig 10.2)
- 10.3 Use "Up/Down" to select No/Yes, then press "Enter", "Set success!" will appear on the Recorder screen. As (Fig 10.3)





(Fig 10.3)

(Fig 10.4)

10.4 Press "Enter" to back to Settings. As above fig (Fig 10.4)


# Handheld AV Receiver

P.13

# Set up Camera Volume

11.1 Use "Up/Down" to select Camera Volume. As below fig (Fig 11.1)



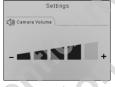

(Fig 11.1)

(Fig 11.2)

- 11.2 Press "Enter" to enter into Camera Volume setting. As above fig (Fig 11.2)
- 11.3 Use "Volume+/Volume-" to adjust volume, then press "Enter", "Set success!" will appear on the Recorder screen. As below fig (Fig 11.3)






(Fig 11.3)

(Fig 11.4)


11.4 Press "Enter" to back to Settings. As above fig (Fig 11.4)

P.14

#### Recording (Only when Mini micro-SD was inserted in the device)

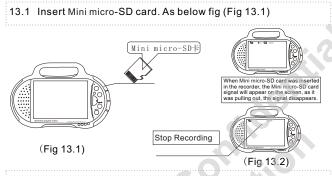

- 13.2 Whether there are objects moving or not, users may press "Record" to begin the recording, the REC sign will appear on the Recorder screen. Press "Record" again to stop recording. As above fig (Fig 13.2)
- 13.3 To play the video recorded: When it is under stand-by mode or connected, press "ENTER" to enter the "File List" setting screen. Choose the "VIDEO" file and press "ENTER".(fig. 13.3)

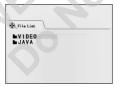



(Fig 13.3)

(Fig 13.4)

#### FCC Consistent Declaration (U.S.A. Only)

Attention: FCC rule regulation, modified and changed must allowed by WENSHING Electronics company, otherwise that would make you operate this apparatus invalid. This apparatus adopted test, according to chapter 15 that FCC regulation, accord with Class B digital restrictions of device. These limits are designed to provide reasonable protection, avoid to having harmful interference at home's environment.

This device may have radiated wireless frequency energy. If don't allow the instruction manual, then may will interfere wireless communication. However, there is no any way to guarantee, it will not be interfered in particular installed. If this device really causes harmful interference, (It could be confirmed by turning on or off this device.) Advise you to try to use the following ways modifying the interference

- Relocation receiving antenna or altering its direction.
- •Increase the distance between device and receiver.
- •Please connect this device to the outlet in the circuit different from the receiver.
- •The following manuals is published by Federal Communications Commission, they must be helpful to all users.
- How to Identify and Resolve Radio-TV Interference Problems. (This manual can be obtained by relevant departments of publication of the U.S. government.)
- Government Printing Office, Washington D.C., 20402. Stock No. 004-00398-5

IMPORTANT NOTE: To comply with the FCC RF exposure compliance requirements. no change to the antenna or the device is permitted. Any change to the antenna or the device could result in the device exceeding the RF exposure requirements and void user's authority to operate the device.

#### Administrative Regulations on Low Power Radio Waves Radiated Devices

Without permission granted by the DGT, any company, enterprise, or user is not allowed to change frequency, enhance transmitting power or alter original characteristic as well as performance to a approved low power radio-frequency devices.

# Article 14

The low power radio-frequency devices shall not influence aircraft security and interfere legal communications; If found, the user shall cease operating immediately until no interference is achieved.

The said legal communications means radio communications is operated in compliance with the Telecommunications Act


The low power radio-frequency devices must be susceptible with the interference from legal communications or ISM radio wave radiated devices.

13.4 After entering the "VIDEO" file, choose the file you want to reserve while recording. Press "ENTER" to replay. When replaying the video recorded, press "ENTER" to stop or

#### Low power indication and plug in the USB recharger

play. Press "REC" to go back (fig. 13.4).

The battery indicator turns yellow to suggest the condition of low battery, plug in the 5V USB connector to charge. For a out-of-box battery, one should charge 4 hours and above before first time use. For a depleted battery, one should recharge at least 2 hours before use. Each recharge can offer 1 hour use. As shown below (Fig 13.5)

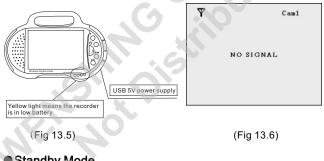

#### Standby Mode

When the Recorder is in Standby Mode, "NO SIGNAL "will appear on the screen. (Fig 13.6)

MENSHING Confidential

NICHASHING SHIRINGS

NICHASHING

ON THE RESERVE SHIRINGS

NICHASHING

N