


2.4G Long Range Wireless Audio Video System


Model : WS-AV Sender TX

Model : WS-AV Sender RX

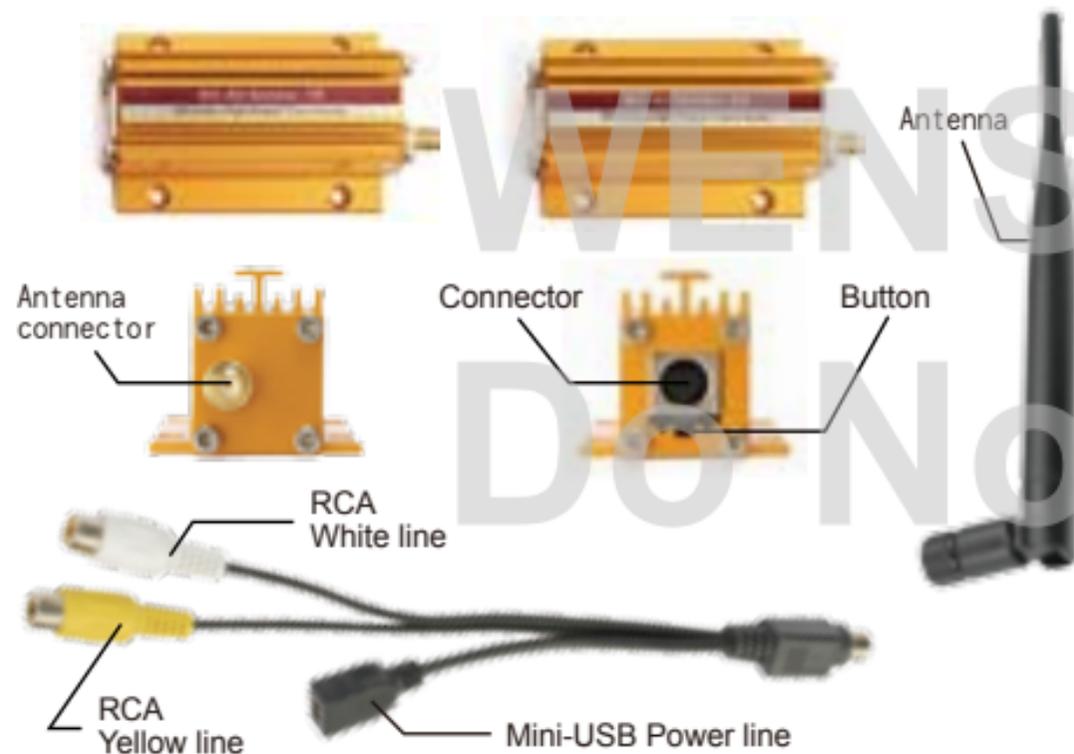

Installation

- 1** Connect antenna to this product's antenna socket (WS-AV Sender TX and WS-AV Sender RX), as shown in Figure 1.
- 2** Plug signal cable in WS-AV Sender TX as shown in Figure 2. Next, connect the signal cable of Mini-USB to adapter. Then, link RCA yellow line to output port from video devices; while link RCA white line to output port from audio devices.
- 3** Plug signal cable in WS-AV Sender RX as shown in Figure 3. Next, connect the signal cable of Mini-USB to adapter. Then, link RCA yellow line to input port from video devices; while link RCA white line to input port from audio devices.

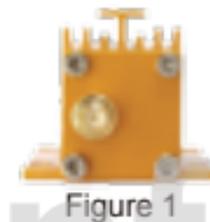

- 4** Pairing Procedure : When supplying power to both WS-AV Sender TX and WS-AV Sender RX the red light and green light are on as shown in Figure 4 , suggesting it is not pairing yet. Next, press the button at the lower part of WS-AV Sender RX while green light blinks suggesting it is ready to receive signal. Press the button at the lower part of WS-AV Sender TX while blue light blinks suggesting the pairing procedure is completed.



- 5** To avoid possible interference, it is suggested to keep distance around 3 to 5 meters between 2 sets when install this product in a given area. If there is any interference found during the pairing procedure, please go back and follow the steps **4** , it will then retrieve new frequency automatically.